


### 3-5. Using the interior lights

#### Interior lights list

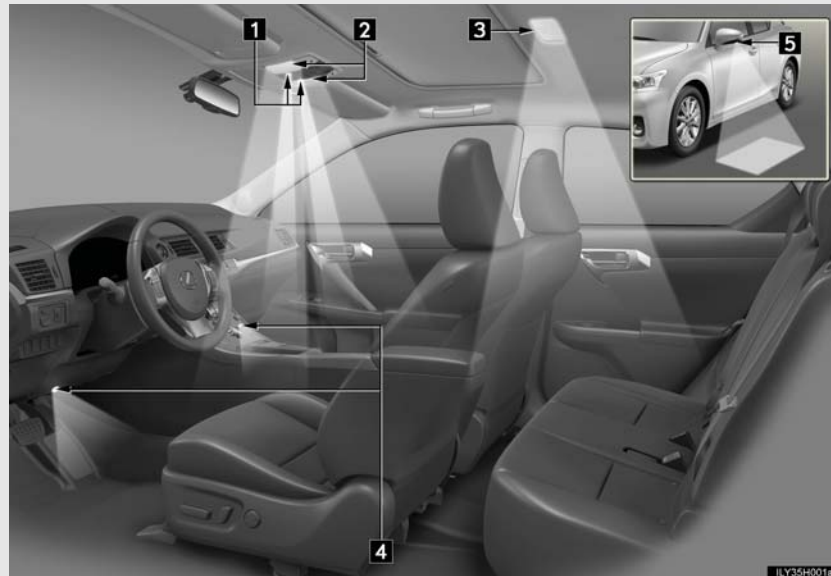

- ❶ Cup holder light (when the “POWER” switch is in ACCESSORY or ON mode)
- ❷ Front personal/interior lights (→P. 446)
- ❸ Rear interior light (→P. 447)
- ❹ Footwell lights
- ❺ Outer foot lights

When the instrument panel light control dial is turned fully down, the cup holder light and the footwell lights will turn off. (→P. 198)

### 3-5. Using the interior lights

#### Personal/interior light main switch and front personal/interior lights

##### Personal/interior light main switch




- 1 Turns the lights off
- 2 Turns the door position on
- 3 Turns the lights on

##### Front personal/interior lights



Turns the lights on/off

### Rear interior light

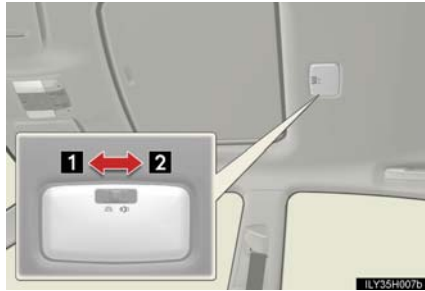

- 1 Turns the light on
- 2 Turns the door position on\*

\*: When the personal/interior light main switch is in the off position, the rear interior light will not turn on even if the door is opened with the rear interior light switch in door position.

#### ■ Illuminated entry system

The lights automatically turn on/off according to "POWER" switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are opened/closed.

#### ■ To prevent 12-volt battery discharge

If the interior lights remain on when the door is not fully closed and the interior light switch (door position on/off) is on, the lights will go off automatically after 20 minutes.

#### ■ Customization

Settings (e.g. the time elapsed before the lights turn off) can be changed. (Customizable features → P. 709)